

Manufacturer and Responsible Party:

QuickClick sp. Z O.O.

Grochowska 23/31 mag i

Warsaw 04-186

Poland

NIP: PL113-289-37-80

Regon: 362209283

KRS: 0000920351

BDO: 000135805

LUCID (DE):DE1234965516350

informacja@quickclick.pl

---

# SAFETY INSTRUCTIONS FOR THE "TENT ACCESSORIES" CATEGORY

## 1. Introduction

This document outlines the safety guidelines and proper use of products in the "**Tent Accessories**" category. This includes items such as **connectors, frames, elastic nets, floors, hangers, cable openings, and other accessories used in grow tents**. Following these guidelines ensures user safety and protects equipment from damage.

---

## 2. General Safety Guidelines

- Ensure that **frames and connectors** are properly assembled and stable before loading the tent structure.
- Store **accessories** in a dry place, away from moisture and heat sources, to prevent damage.
- Do not overload the tent frame beyond the maximum weight specified by the manufacturer.
- Ensure that **cable openings** are secure and safe for electrical cords.

- Regularly inspect the condition of all tent structure components and accessories.
  - Do not use damaged accessories, such as cracked connectors, torn nets, or unstable frames.
  - Follow the assembly instructions provided with the products.
- 

### 3. Safe Use of Accessories

- **Connectors and Frames** – Ensure all structural elements are properly connected and stable before adding any weight.
  - **Elastic Nets** – Do not stretch nets beyond their maximum capacity to avoid breakage.
  - **Tent Floors** – Ensure the floor is flat and free of sharp objects that could cause damage.
  - **Hangers and Hooks** – Mount hangers only on stable frame parts and follow the maximum load capacity.
  - **Cable Openings** – Pass cables carefully through openings and secure them to avoid fraying or short circuits.
- 

### 4. Maintenance and Storage of Accessories

- Regularly clean tent components and accessories to remove dust and moisture.
  - Store accessories in their original packaging or in a dry place to prevent damage.
  - Inspect the condition of connectors, frames, and hangers before each use.
  - Replace damaged or worn components with original parts as recommended by the manufacturer.
- 

### 5. Emergency Procedures

- In case of tent structure damage, immediately remove any load and perform repairs.
  - If electrical damage occurs, disconnect power and ensure cables are safe.
  - Replace damaged structural components and accessories to maintain tent stability.
- 

## Final Remarks

Following these guidelines ensures safe and effective use of tent accessories. Perform regular maintenance and inspect the technical condition of the products.

**Safety First!**

